

Inbound / Outbound (Operations) - NTEP Compliance Controls Added (20219)

Last Modified on 03/20/2026 10:46 am PDT

For scale operations **that must follow NTEP requirements**, a database-level setting will be enabled to restrict manual weight entry to three scenarios:

1. The scale read was attempted and failed.
 - When reading from a scale and an error is returned, an **Enter Manual Weight** dialog box will display to capture the manual weight and reason code.
2. No scales are connected to the machine.
3. A correction is being entered after the fact.
 - If the weight field is blank/zero, direct editing of the weight field isn't allowed.
 - If the weight field has a value greater than zero, the **Manual Weight** dialog box will display to capture the manual weight and reason code.

For operations **not subject to NTEP requirements**, the database-level setting is disabled.
